

OPERATION

■ Quick Start

⚠ Caution!

- Before washing, please make sure the washer is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the "Drum Clean" or other program with the optional temperature of 90 °C. Be careful not to put laundry and detergent in the machine.

📌 Calibration


It's recommended to calibrate the washing machine, so that provide the best performance.

The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

- 1- Remove all accessories from the drum and close the door;
- 2- Insert the mains plug to the socket;
- 3- Switch on the washing machine and press "Delay" and "Temp." simultaneously for about 10 seconds until "t19" is displayed;
- 4- Press [▷||] to start the appliance and wait till "*****" is displayed.

OPERATION


1. Before Washing

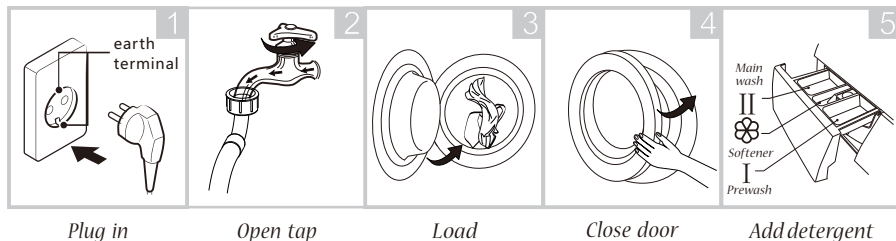

Note!

- Detergent need to be added in compartment I if the pre-wash function is selected.

2. Washing

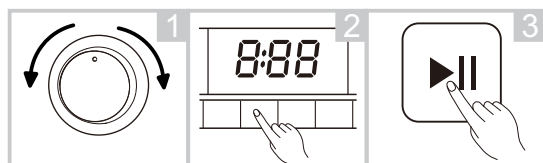


3. After Washing

Buzzer beep and "End" on display.


OPERATION

■ Before Each Washing


- The ambient temperature of the washer should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

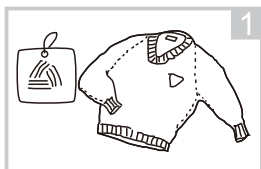


Check the care label

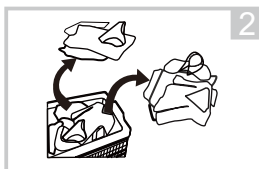


Sort laundry according to color and textile type

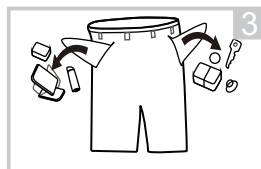


Take all items out of the pockets

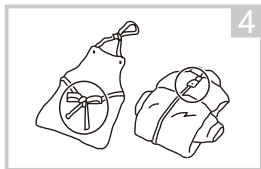

Tie together long textile strips and belts, close zips and button

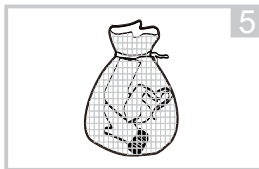

Put small items into a laundry bag

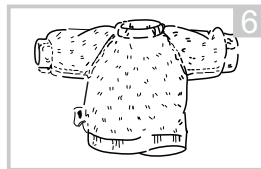

Turn easy-pilling and long-pile fabric inside out


⚠ Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

OPERATION

■ Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ⊞ Release button to pull out the dispenser

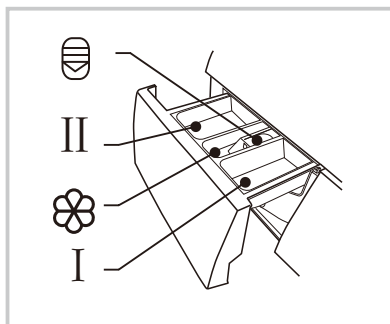

ⓘ Caution!

- Detergent only need to be added in "compartment I" after selecting pre-wash function.

Programme	I	II	☼	Programme	I	II	☼
Cotton	○	●	○	Quick 15'		●	○
Steam	○	●	○	Rapid 45'		●	○
Synthetic	○	●	○	Sport	○	●	○
Mix	○	●	○	Wool		●	○
Jeans	○	●	○	Baby Care	○	●	○
ECO 40-60		●	○	Bulky/Bedlinen	○	●	○
20 °C		●	○	Rinse & Spin			○
Spin Only				Drum Clean			

● Mandatory ○ Optional

OPERATION

Detergent Recommendation

<i>Recommended washing detergent</i>	<i>Wash cycles</i>	<i>Washing temp.</i>	<i>Type of laundry and textile</i>
<i>Heavy-duty detergent with bleaching agent and optical brighteners</i>	<i>Cotton, ECO 40-60</i>	<i>40/60</i>	<i>White laundry made from boil-proof cotton or linen</i>
<i>Colour detergent without bleaching agent and optical brighteners</i>	<i>Cotton</i>	<i>20/40</i>	<i>Coloured laundry made from cotton or linen</i>
<i>Color or mild detergent without optical brighteners</i>	<i>Cotton, Synthetic</i>	<i>20/40</i>	<i>Coloured laundry made from easy care fibres or synthetic materials</i>
<i>Mild washing detergent</i>	<i>Synthetic</i>	<i>20</i>	<i>Delicate textiles, silk, viscose</i>
<i>Special wool detergent</i>	<i>Wool</i>	<i>20/40</i>	<i>Wool</i>

Note!

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.

Following symptoms are a sign of detergent overdosing:


- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

OPERATION

Control Panel

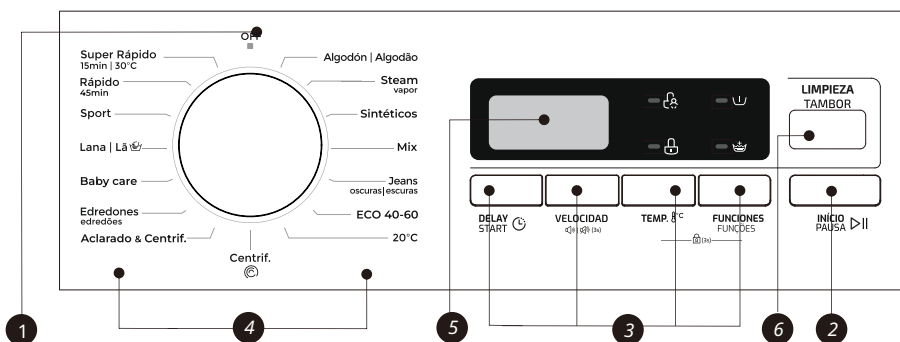

1 OFF
Turn the appliance on and off.


2 Start/Pause
Start or pause your programme.

3 Option
This allows you to select additional functions and will light when selected.

4 Programmes
Available according to the laundry type.

5 Display
The display shows settings, estimated remaining time, options and status messages.

6 Drum Clean
Specially set in this machine to clean the drum and tube.

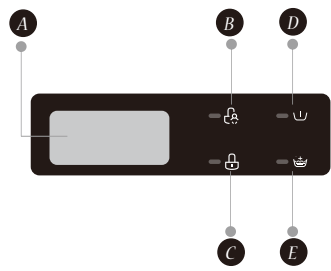

A Display

Wash Time	Delay Time
125	2H
Speed	Error
400	E30
End	Temp.
End	20

B Child Lock **C Door Lock**

D Pre Wash **E Extra Rinse**

OPERATIONS

■ Programmes

Programme	Load(kg)				Temp (°C)	Default Time			
	6.0	7.0	8.0	9.0	Default	6.0	7.0	8.0	9.0
Cotton	6.0	7.0	8.0	9.0	40	2:40	3:39	3:39	3:39
Steam	3.0	3.5	4.0	4.5	40	1:48	1:48	1:48	1:48
Synthetic	3.0	3.5	4.0	4.5	40	2:20	3:18	3:18	3:18
Mix	6.0	7.0	8.0	9.0	40	1:20	1:20	1:20	1:20
Jeans	6.0	7.0	8.0	9.0	40/60	1:40	1:45	1:45	1:45
ECO 40-60	6.0	7.0	8.0	9.0	--	3:18	3:28	3:38	3:48
20°C	3.0	3.5	4.0	4.5	20	1:01	1:01	1:01	1:01
Spin Only	6.0	7.0	8.0	9.0	--	0:12	0:12	0:12	0:12
Rinse & Spin	6.0	7.0	8.0	9.0	--	0:20	0:20	0:20	0:20
Bulky/Bedlinen	3.0	3.5	4.0	4.5	40	1:48	1:48	1:48	1:48
Baby Care	6.0	7.0	8.0	9.0	60	2:01	1:42	1:42	1:42
Wool	2.0	2.0	2.0	2.0	40	1:07	1:07	1:07	1:07
Sport	3.0	3.5	4.0	4.5	20	0:47	0:47	0:47	0:47
Rapid 45'	2.0	2.0	2.0	2.0	20	0:45	0:45	0:45	0:45
Quick 15'	2.0	2.0	2.0	2.0	Cold	0:15	0:15	0:15	0:15
Drum Clean	--	--	--	--	90	1:18	1:18	1:18	1:18

* For model WMK 10620 WH, the default Temp under Jeans programme is 40 °C.



Note!

- The parameters in this table are only for user's reference. The actual parameters may be different with the parameters in above mentioned table.

OPERATION

■ Programmes

WMK 10620 WH							
Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in h:min	Energy consumption in kWh/cycle	Water consumption in L/cycle	Highest washing temperature °C ¹⁾	Residual moisture in %/Spin speed ²⁾
Cotton (60°C)	6.0	60	2:45	1.280	58	60	65%/1000
20°C	3.0	20	1:01	0.207	38	20	65%/1000
Mix	6.0	40	1:20	0.684	58	40	65%/1000
Synthetic	3.0	40	2:20	0.327	55	40	70%/800
Quick 15'	2.0	Cold	0:15	0.035	32	Cold	70%/800
ECO 40-60 ³⁾	6.0	–	3:18	0.850	48.0	37	62.9%/1200
	3.0	–	2:36	0.550	40.0	33	62.9%/1200
	2.0	–	2:36	0.379	37.0	25	62.9%/1200

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the ECO 40-60 programme are indicative only.
- 20 °C program is able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023, (EU) 2021/340, (EU) No 2021/341

The EU energy efficiency class is: D

Energy test program: ECO 40-60. Other as the default.

Halfload for 6.0kg machine: 3.0kg.

Quarterload for 6.0kg machine: 2.0kg.

OPERATION

WMK 40740 WH / WMK 40740 SS							
Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in h:min	Energy consumption in kWh/cycle	Water consumption in L/cycle	Highest washing temperature °C ³⁾	Residual moisture in %/Spin speed ²⁾
Cotton (60°C)	7.0	60	3:44	1.392	65	60	62.9%/1200
20°C	3.5	20	1:01	0.177	41	20	65%/1000
Mix	7.0	40	1:20	0.696	65	40	65%/1000
Synthetic	3.5	40	3:18	0.698	41	40	62.9%/1200
Quick 15'	2.0	Cold	0:15	0.030	31	Cold	70%/800
ECO 40-60 ³⁾	7.0	–	3:28	0.696	57.0	45	62.9%/1200
	3.5	–	2:42	0.385	41.0	33	62.9%/1200
	2.0	–	2:42	0.150	32.0	23	62.9%/1200

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the ECO 40-60 programme are indicative only.
- 20 °C program is able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/A11:2020 With (EU)2019/2014, (EU)2019/2023, (EU)2021/340, (EU)2021/341

The EU energy efficiency class is: A

Energy test program: ECO 40-60. Other as the default.

Half load for 7.0kg machine: 3.5kg.

Quarter load for 7.0kg machine: 2.0kg.

OPERATION

WMK 40840 WH / WMK 40840 SS							
Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in h:min	Energy consumption in kWh/cycle	Water consumption in L/cycle	Highest washing temperature °C ¹⁾	Residual moisture in %/ Spin speed ²⁾
Cotton (60°C)	8.0	60	3:44	1.498	71	60	53%/1400
20°C	4.0	20	1:01	0.183	44	20	65%/1000
Mix	8.0	40	1:20	0.754	71	40	65%/1000
Synthetic	4.0	40	3:18	0.727	44	40	60%/1200
Quick 15'	2.0	Cold	0:15	0.030	31	Cold	70%/800
ECO 40-60 ³⁾	8.0	–	3:38	0.760	61.0	33	53.9%/1350
	4.0	–	2:48	0.412	45.0	28	53.9%/1350
	2.0	–	2:48	0.208	36.0	24	53.9%/1350

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the ECO 40-60 programme are indicative only.
- 20 °C program is able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/prA2019 With (EU) 2019/2014, (EU) 2019/2023, (EU) 2021/340, (EU) No 2021/341

The EU energy efficiency class is: A

Energy test program: ECO 40-60. Other as the default.

Half load for 8.0kg machine: 4.0kg.

Quarter load for 8.0kg machine: 2.0kg.

OPERATION

WMK 40940 WH							
Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in h:min	Energy consumption in kWh/cycle	Water consumption in L/cycle	Highest washing temperature °C ¹⁾	Residual moisture in %/ Spin speed ²⁾
Cotton (60°C)	9.0	60	3:44	1.603	78	60	53%/1400
20°C	4.5	20	1:01	0.189	48	20	65%/1000
Mix	9.0	40	1:20	0.813	78	40	65%/1000
Synthetic	4.5	40	3:18	0.756	48	40	60%/1200
Quick 15'	2.0	Cold	0:15	0.030	31	Cold	70%/800
ECO 40-60 ³⁾	9.0	–	3:48	0.842	63.0	43	53.9%/1350
	4.5	–	2:54	0.475	49.0	33	53.9%/1350
	2.5	–	2:54	0.211	39.0	23	53.9%/1350

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for programmes other than the ECO 40-60 programme are indicative only.
- 20 °C program is able to clean lightly soiled cotton laundry, at a nominal temperature of 20 °C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN 60456:2016/A11:2020 With (EU) 2019/2014, (EU) 2019/2023, (EU) 2021/340, (EU) 2021/341

The EU energy efficiency class is: A

Energy test program: ECO 40-60. Other as the default.

Half load for 9.0kg machine: 4.5kg.

Quarter load for 9.0kg machine: 2.5kg.

OPERATION

- 1) *The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.*
- 2) *Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.*
- 3) *The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.*

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washer up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

Caution!

- *If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.*

OPERATION

■ Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
Rapid 45'	Washing few and not very dirty clothes quickly.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Jeans	Specially for jeans.
20°C	Washing brightly colored clothes, it can protect the colors better.
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Spin Only	Spins and drains the water.
Rinse&Spin	Rinses and then spins the laundry, and then drains the water.
Sport	Washing the activewear.
Bulky/Bedlinen	This program is specially designed for washing Bulky/Bedlinen.
Steam	Steam is applicable for daily laundries like cotton and synthetics. The steam can deeply penetrate the fiber, which effectively eliminate bacteria and germs, preventing odors and protecting your health.
ECO 40-60	Able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle.
Drum Clean	Specially set in this machine to clean the drum and tube. It applies 90 °C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. When proper amount of chlorine bleaching agent is put in, the barrel cleaning effect will be better. The customer can use this programme regularly according to the need.

Note!

- Reference to your product to select the programmes.

OPERATION

■ Option

Cycle	Default spin speed in rpm			Additional functions
Wash cycles	6kg	7kg	8kg & 9kg	
Cotton	1000	1200	1400	🕒, 📏, 🏠
Steam	1000	1000	1000	🕒, 📏, 🏠
Synthetic	800	1200	1200	🕒, 📏, 🏠
Mix	1000	1000	1000	🕒, 📏, 🏠
Jeans	800	1000	1000	🕒, 📏, 🏠
ECO 40-60	1200	1200	1400	🕒
20°C	1000	1000	1000	🕒, 🏠
Spin Only	1000	1000	1000	🕒
Rinse & Spin	1000	1000	1000	🕒, 🏠
Bulky/Bedlinen	1000	1000	1000	🕒, 📏, 🏠
Baby Care	1000	1000	1000	🕒, 📏, 🏠
Wool	600	600	600	🕒, 🏠
Sport	800	800	800	🕒, 📏, 🏠
Rapid 45'	800	800	800	🕒, 🏠
Quick 15'	800	800	800	🕒
Drum Clean	--	--	--	🕒

📌 Note!

- For the maximum spin speed, program time, and other details of the ECO 40-60 program, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.

OPERATION

Speed

Speed

When needed, the spinning speed can be adjusted pressing the Speed button in the following steps: 1200: 0-400-600-800-1000-1200, 1400: 0-400-600-800-1000-1200-1400

Delay Start

Delay

1. Select a programme
2. Press the Delay button to choose the delaying time 0-24H
3. Press [Start/Pause] to start the delay operation



Choose programme



Setting time



Start

To cancel the Delay function, press the "Delay" button before starting the program until the display shows 0 H. If the program has already started, switch the appliance off and afterwards on and select a new programme.



Pre Wash

Extra washing function before the main washing cycle starts to increase the washing performance.

Note: Detergent needs to be added to the compartment I.



Extra Rinse

The laundry will undergo an extra rinse after selecting this function.

Drum Clean

Drum Clean

After the machine runs to the set counting period (counting cycle is 25 times), Drum Clean lamp flashes at the end of the last program, reminding the user to run the program by:

1. Remove the clothes and close the door.
2. Press [Drum Clean].
3. Press [Start / Pause].

Number of washing cycles will be recounted when drum clean program is finished.

Skip the reminder:

1. Press and hold the Drum Clean button for 3s, Drum cleaner indicator reminder will be cancelled and washing cycles will be recounted for another 25 cycles.
-

TEMP.

Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold - 20°C - 40°C - 60°C - 90°C.
