


〔Remote Controller〕

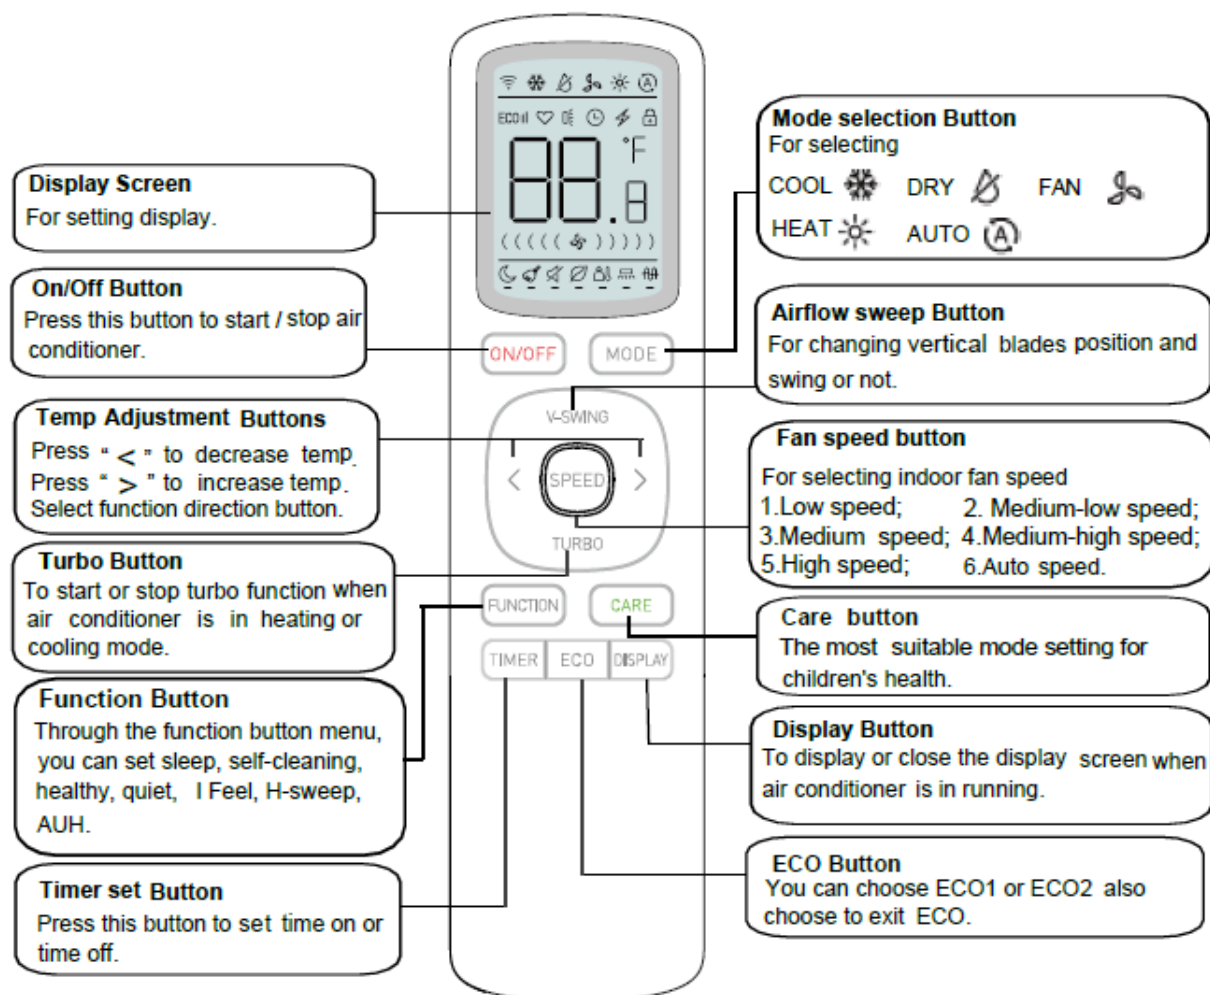

Remarks:

- 1.If user want to make the room air cool or warm quickly ,user can press "turbo" button incooling or heating mode,air conditioner will run in power function.If press "turbo" button again, air conditioner will exit power function.
- 2.Select function: enter the function menu, and press the add-subtract button to move back and forth to select the corresponding function. The selected function item flashes.
- 3.Click the function button to first return to the next function position of the last set function. You can move the position of the function to be set by adding and subtracting keys. The function to be set flashes for 10s. Click the function key within 10s, and this function will be selected. The lower horizontal line of the selected function icon lights up. Click the function button again to cancel the function, and the lower horizontal line will cancel.
- 4.Press and hold the "Temperature Up" and "Temperature Down" keys for 5S after turning on the machine, and the display can be switched to Fahrenheit. Press and hold the "Temperature Up" and "Temperature Down" keys for 5S again to switch back to Celsius.
- 5.The above illustration of remote controller is only for reference, it may be slightly different from the actual product you selected.

