

Operate Washing Machine

NOTE

Ensure your machine is installed properly before use.

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

 
 
1. Connect power source and water.
2. Put a little detergent (about 10g) into the drawer and close it.
3. Turn on the Power ①, turn the knob left/right to start the machine.
4. Turn the knob to be "Cotton" program.
5. Press the ▷|| (Start/Pause) button.

This will remove any water from the manufacturer's test run remaining in the machine.

■ Sort clothes

Please read this recommendation carefully to avoid the troubles of washing machine and damages of clothes.


1. Do not put clothes over load the rated capacity.
2. Sort the laundry by colour and by care label. Most garments have a textile care label in the collar or side seam.
3. Make sure all the pockets are empty, Foreign objects (e.g. nails, coins, paper clips, etc.) can cause damage to garments and components in the machine.
4. Close any zips, fasten hooks etc. before washing.
5. For clothes to be washed, they should be sorted according to color. Dark clothes should not be washed with light clothes especially.
6. Badly soiled areas, stains etc. should be pre-treated with liquid detergent, stain removers etc.
7. Turn over the clothes which pill easily and is with woolen surface before putting them into the machine.

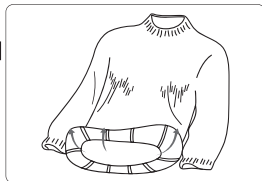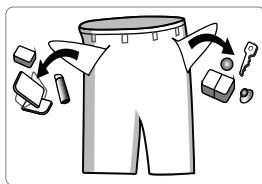

 **NOTE:** Make sure that no clothes is caught between the door and the seal.

■ Put detergent

 - Pull out the detergent drawer.
- Add detergent for prewash into compartment I. Used only for prewash programs. (option1: detergent that is solid; option2: detergent that is liquid.)
- Add detergent for main wash into compartment II. (option1: detergent that is solid; option2: detergent that is liquid.)
- Laundry liquid placement box is only used for laundry liquid;

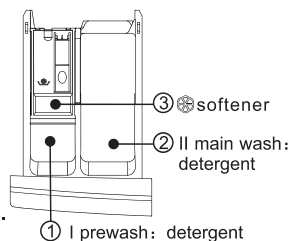

Operate Washing Machine

- Add fabric softener into compartment .
- Please choose suitable type of detergent for the various washing temperature to get the best washing effect with less water and energy consumption.
- The amount of detergent/softener used should be added only once at a time. Please refer to the manufacturer's instructions for the dosage of detergent/softener.
- Excessive detergent will produce a lot of foam, easy to overflow, and will affect its dissolution, resulting in rinsing difficulties.

Note: when you want to use the “Disinfectant” procedure, please put an appropriate amount of disinfectant in ①, and an appropriate amount of laundry liquid in ②, which can be used to disinfect and clean clothes at the same time.

Detergent Release(automatically release)

Use Liquid Detergent (Automatically)

 
You could add liquid detergent in box ① before washing. During operation, washing machine would add liquid detergent automatically according to the weight. It can achieve manually add once, smartly, accurately and automatically add for several times.

Use Washing powder or Softener(Manually)

If you would like use washing powder or softener, please push the button to close automatically add function.(The LED indicator will now be OFF) Choose non-foaming or low-foaming detergent, which are suitable for front loading washing machines.

Everytime put once washing machine quantity, which could refer to manual.

Over-loading washing powder could generate a lot of bubbles. It causes difficulties for washing because of the influence of powder's dissolution.

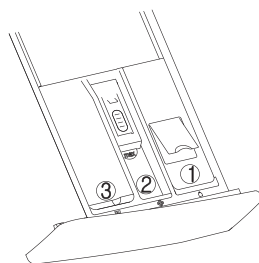

- ① liquid detergent box:
liquid detergent
- ② softener box: liquid softener
- ③ washing powder box:
powder or liquid detergent

NOTE

1. At the first time using liquid detergent and automatically release function, please operation “ Express 15’ ” program to washing tube and drum.
2. It is normal that a few liquid detergent flow into down-water box when pulling liquid detergent box. Please avoid pull the box frequently to decrease the cost of liquid detergent.
3. The quantity of softener please refer to manual. Over-loading softener would destroy artificial fiber.
4. Liquid level do not over the MAX of Distributor box.
5. Please dilute the thick softener or bleach first and then release in distributor box.

Operate Washing Machine

■ Washing steps

 
① Connect inlet hose and turn on the tap



② Insert power plug




③ Place drain hose



④ Open the door, put in clothes and shut it down; put detergent in detergent case and close the case;

 ⑤ Turn on the power

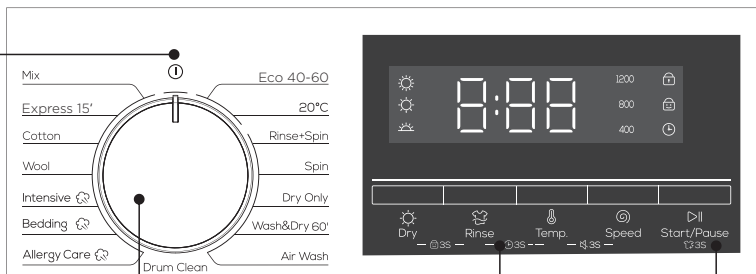

⑥ Select program as needed

⑦ Customize settings like delay time, temperature, spin rate other Settings, etc.

⑧ Press down Start button.

- Turn the knob left and right to turn on the washing machine.
- Turn the Cycle Selector to select a cycle.
- Change the cycle settings (Temperature and Spin, etc.) as necessary.
- Set Time Delay if you want to finish the wash cycle at the desired time.
- Press Start/Pause ▷||.


To change the cycle during operation

- Press Start/Pause ▷|| to stop operation.
- Select a different cycle.
- Press Start/Pause ▷|| again to start the new cycle.

Operate Washing Machine

■ Control panel

 * The following illustration is a simple example of the model control panel. The illustration is for reference only. Please refer to the actual effect.

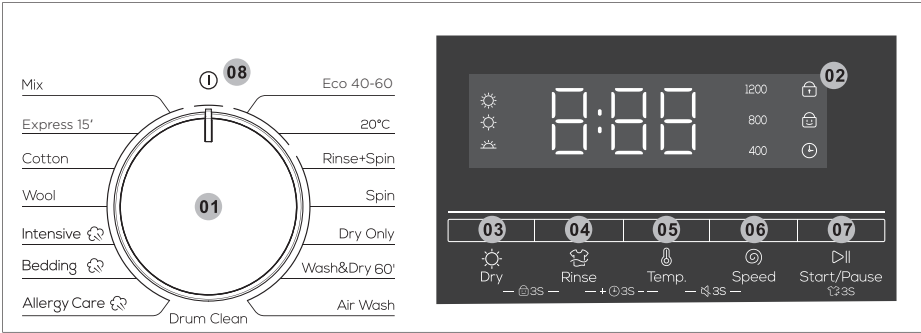

01 Cycle Selector	Turn the dial to select a cycle.
02 Display	The display shows current cycle information and estimated time remaining, or an information code when a problem occurs.
03 Dry	Prss down to select drying mode. Continuous press this button, can be in the “Strong”, “Standard”, “Slight” and no drying function mode switch; Slight — Clothes that need to be dried after the drying process; Standard — Perform drying procedures for general clothing; Strong — Clothes that is basically ready to wear after the drying process.
04 Rinse	Press to select the rinsing times. Available rinsing times depends on the cycle. The selected rinsing times will be displayed on the display.
05 Temp.	Press to change the water temperature for the current cycle. Available temperature range depends on the cycle. The selected temperature will be displayed on the display.
06 Speed	Press to change the spinning speed for the current cycle. Available spin speed depends on the cycle. The selected spin speed will be displayed on the display.
07 Start/Pause ▷	Press to start or pause operation. Press the button once to start a cycle. To pause operation, press the button again. You may change the cycle settings and options. To resume paused operation, press the button again.
08 Power ①	The knob indicates to rotate to the “On/Off” program to close the machine. When the machine is off, turn the knob left/right to start the machine.

Operate Washing Machine

Delay

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 24 hours (in 1 hour increments). The hour displayed indicated the time the wash will finish.

1. Select a cycle. Then change the cycle settings if necessary.
2. Press **Rinse(+)** and **Temp.(-)** repeatedly until a desired end time is set.
3. Press **Start / Pause** .

The corresponding indicator turns on with the clock running.

4. To cancel the **Delay**, Turn the knob to restart the washing machine.

Real-life case

You want to finish a two-hour course 3 hours later from now. For this, you add the Delay option to the current cycle with the 3-hour setting, and press **Start / Pause**  at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00 p.m.

Steam Wash Icon

If this icon is always bright, it means the Steam Wash function is enabled. Due to the different configuration of models, some models do not have this configuration, please refer to the actual model.

Child Lock

To prevent accidents by children, Child Lock locks all buttons except for **Power** .

- To activate or deactivate the Child Lock function, press and hold **Dry** and **Rinse** simultaneously for 3 seconds.

When Child Lock is activated, the indicator  lights up.

Alarm Off

You can turn on or off the sound of the cycle selector and all buttons.

- To turn on or off the sound, press and hold **Temp.** and **Speed** simultaneously for 3 seconds.

Door Lock

When the door is not closed or locked normally, the icon is not bright; Lock the door correctly, the icon is always bright.

Reload 3S

Long press the **Start / Pause**  button for 3 seconds. After the lock is unlocked, the function of adding clothes in the middle can be started.

Operate Washing Machine

■ Programe

Mix: For mixed load consisting of cotton and synthetic.

Express 15' : For lightly soiled garments in less than 2.0 kg that you want to wash quickly.

Cotton: For cottons, bed linens, table linens, underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted according to the load.

Wool: The wool course features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion.
A neutral detergent is recommended.

Intensive : For heavily soiled items. The operation time is longer than other cycles. Steam provides protection against allergies and eliminates common bacteria.

Bedding : This procedure is suitable for washing heavier clothes. Jeans, bedding, etc. Steam provides protection against allergies and eliminates common bacteria.

Allergy Care : Featuring a high-temperature wash and extra rinses to help remove the remaining detergent effectively. Steam provides protection against allergies and eliminate common bacteria.

Eco 40-60 : For cleaning normally soiled cotton items which are declared to be washable at 40 °C or 60 °C, together in the same cycle. This cycle is used to assess the compliance with the EU Ecodesign legislation.
This cycle is set as a default.

20°C: New European standard special procedures, used for washing some gentle clothes, the temperature can only choose 20°C, protective clothing.

Rinse+Spin: Featuring an additional rinse process after applying fabric softener to the laundry.

Spin: Featuring an additional spin process to effectively remove moisture from laundry.

Dry Only: For drying general clothes.

Wash&Dry60': Wash and dry for 60 minutes.

Air Wash: For clothes that need to remove odors and wrinkles.

Drum Clean: Cleans the drum by removing dirt and bacteria from it. Make sure the drum is empty. Do not use any cleaning agents for cleaning the drum.

Operate Washing Machine

■ Table of Washing Procedures

- Washing efficiency and performance is determined by used detergent quality. Use only machine wash approved detergent.
- If need use specific detergent, e.g. for synthetic and woolen fabric. Mind always detergent manufacturer recommendations.
- Do not use dry cleaning agents such as trichloroethylene and similar products. Choose the best detergent.

Program	Weight (kg)	
	Wash	Dry
Mix	5	2.5
Express 15'	2	2
Cotton	10	6
Wool	2	/
Intensive☁	5	2.5
Bedding☁	7	3
Allergy Care☁	5	2.5
Eco 40-60	10	2
20°C	5	6
Rinse+Spin	10	6
Spin	10	6
Dry Only	/	6
Wash&Dry60'	0.5	0.5
Air Wash	/	3
Drum Clean	0	0

- Do not add powder detergent if the liquid detergent is not used out, otherwise it may cause foam spillover and wash difficulties due to excessive detergent;
- The washing time and effect of each program can be well controlled for clothes with slight dirt; add more detergent, take out some clothes or select program with longer operation time if the clothes are too dirty.
- Some programs have cloth weight aware function and display “- -” in timing area and then display time in 2~3 minutes after weighing;
- This machine has eccentric protection function to distribute and disperse clothes, so actual washing time is prolonged, this is normal;
- Do not touch the machine during Dry program in case of scald!(Suitable for dryers)